


USE AND CARE GUIDE

Tiered Fountain

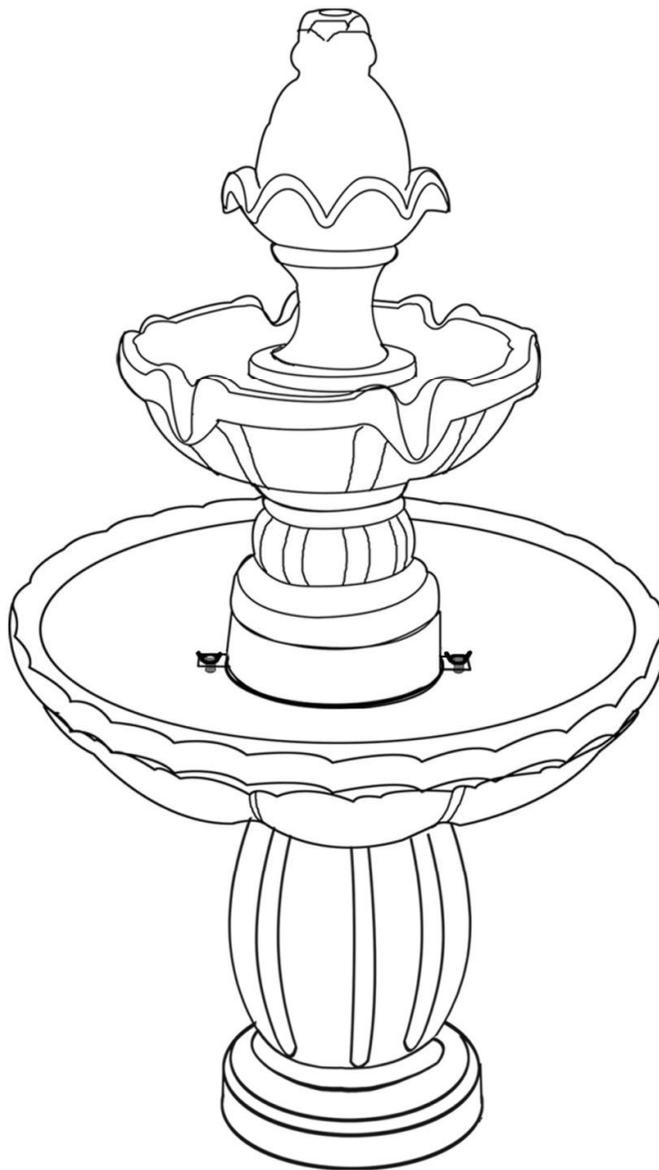



DO NOT RETURN TO RETAILER
IF YOU HAVE ANY
QUESTIONS OR CONCERNS PLEASE CALL
DONG FANG JUN MA TRADING CO
TOLL FREE 866-273-2264
MONDAY – FRIDAY 9AM TO 5PM EST
OR EMAIL TO
CUSTOMERSERVICE@DONGFANGJM.COM

Assembly Instruction

Item # 277-5539
Tiered Fountain

**** WARNING ****

Read these instructions carefully and keep the fountain power off until the following assembly process is completed.

Notes:

- Choose an appropriate location for the fountain.
- Excessive weight or pressure on any of the fountain sections may cause it to fall. Keep pets, children, or anyone from sitting, leaning, or climbing on any of the fountain components.
- While fountain is designed to operate as splash free as possible, some water splashing out of the fountain is inevitable. Place the fountain in a location where any splashing will not cause damage. Always keep the fountain working with sufficient water and clean of debris and dirt to ensure proper functioning of the pump.
- If necessary, clean the fountain with a soft cloth and change the water frequently. Due to water evaporation, you may see a buildup of white residue on the fountain surface from mineral content in the water supply. To prevent such buildup, regularly clean the fountain with mild soap and water, do not use any abrasive, which may damage the applied finish
- See the pump instructions for pump safety, maintenance, and warranty information. Keep this manual for future reference.

Use of water clarifier, or algacide of any kind will damage the paint on the fountain and will not be covered under the manufactures warranty.



Installation & Assembly


- Take out all the package parts from the carton
- Assemble the fountain as outlined in the below steps
 - Step 1: Screw part C to part B and make sure the two arrows can match each other; Shown as in diagram 1
 - Step 2: Place the fountain in an even surface., As the water flow will be affected if the surface is uneven Shown as in diagram 2
 - Step 3: Place the pump into part B and pull the pump wire out of the pipe. Shown as 3a in diagram 3
 - Step 4: Connect the pump to water pipe. Shown as 3b in diagram 3. Make sure the water pipe is straight and not twist together. As this may prevent water from coming in.
 - Step 5: Screw part A to part B and tighten two bolts Shown as 4a, Apply the door to fountain Shown as 4b in diagram 4
 - Step 6: Fill fountain with enough water to full submerge the pump and plug the pump to the socket, The water will start to flow in minutes. Shown as 4c and 4d in diagram 4

Attention: Always make sure the water can submerge the pump completely to work properly and prevent the pump damage.

- Adjust the pump flow rate to achieve the desired effect and to minimize any splashing. Splashing can occur if the flow rate is too high or the reservoir is too full. The flow rate can be increased or decreased by moving the flow rate control dial on the pump body. Moving the switch towards '+/ Max' will increase the flow rate and moving it towards '-/Min' will decrease it.

Parts List

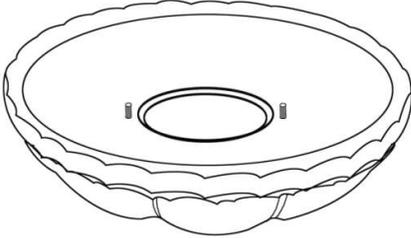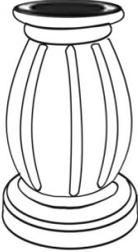
No	Photo	Qty
A		1
B		1
C		1

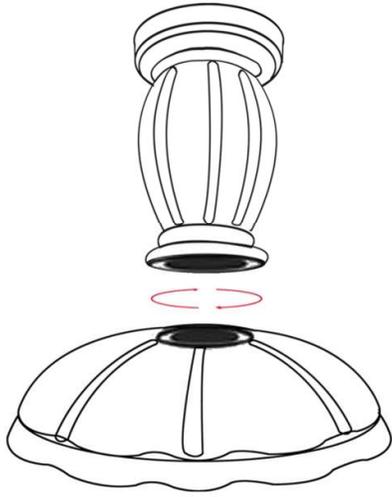


①



②

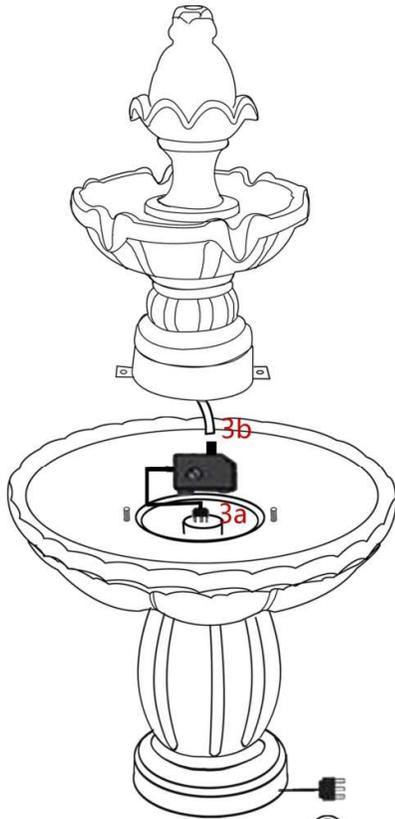

③

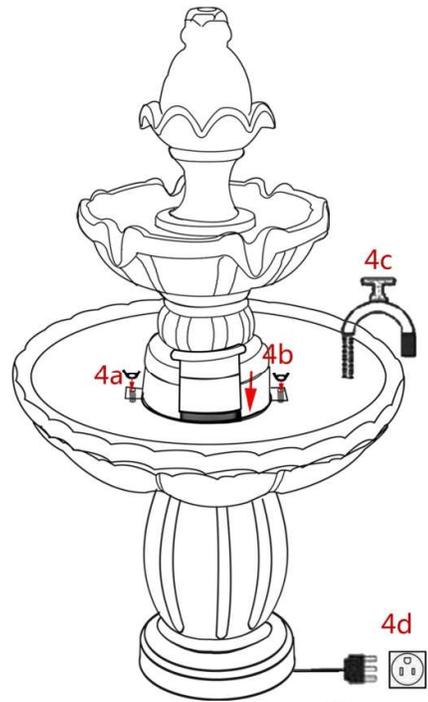

④

Troubleshooting

--TURN OFF THE POWER BEFORE YOU CHECK THE FOLLOWING--

If pump does not run,

- (1) Check the circuit breaker, try another outlet.
- (2) Check the water level in the fountain. Running the pump without sufficient water can damage the pump.
- (3) Check the setting of the flow control on the pump and adjust the flow.
- (4) Check the pump discharge and intake for dirt and debris.
- (5) Check the fountain feature tubing for kinks and obstructions.
- (6) The pump might be "airlocked". Plug and unplug the pump several times to release the air inside the pump.
- (7) Check and reconnect all the cords and try again.
- (8) Open the door to check and make sure the water pipe is not twisted. As this will may prevent water from coming in.