










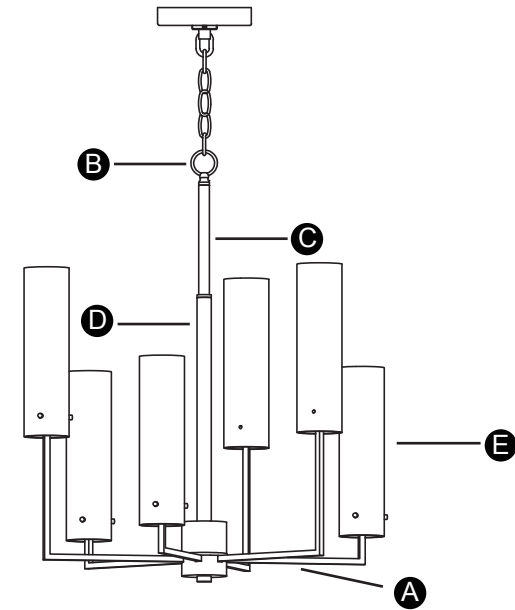


**Questions, problems, missing parts?**  
Before returning to your retailer, call our customer service  
at 1-800-267-4427 Monday – Friday 8:00 a.m. – 5:00 p.m. EST

**PACKAGE CONTENTS**



**HARDWARE CONTENTS Note: Hardware not shown actual size.**

- |   |                             |   |               |   |                     |
|---|-----------------------------|---|---------------|---|---------------------|
| <b>AA</b>  | Wire Nut<br>x 3             | <b>DD</b>  | Canopy<br>x 1 | <b>GG</b>  | Bottom box<br>x 1   |
| <b>BB</b>  | Mounting Bracket<br>x 1     | <b>EE</b>  | Chain<br>x 1  | <b>HH</b>  | Finial<br>x 1       |
| <b>CC</b>  | Electrical Box Screw<br>x 2 | <b>FF</b>  | Stem<br>x 1   | <b>II</b>  | Thumb Screw<br>x 18 |



## IMPORTANT SAFETY INSTRUCTIONS

Please read and understand this entire manual before attempting to assemble, operate or install the product.

Please save this instruction manual.

### WARNING

- Turn off electricity at main fuse box (or circuit breaker box) before beginning installation by removing fuse (or switching off circuit breaker).
- Be careful not to damage or cut the wire insulation (covering) during fixture installation. Do not permit wires to contact any surface having a sharp edge. To do so may damage or cut the wire insulation, which could cause serious injury or death from electric shock.
- This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.
- Connect the ground wires (bare copper or green) from your fixture to the ground wire (bare copper or green) or ground screw in the electrical box.

### CAUTION

- All electrical connections must be in agreement with local codes, ordinances or the national electric code (NEC). Contact your municipal building department to learn about your local codes, permits and/or inspections.
- Risk of fire – most dwellings built before 1985 have supply wire rated for 140°F/60°C. Consult a qualified electrician before installation.
- Do not connect this fixture to an electrical system that does not provide a means for equipment grounding. Never use a fixture in a two-wire system that is not grounded. If you are not sure your lighting system has a grounding means, do not attempt to install this fixture. Contact a qualified, licensed electrician for information with regards to proper grounding methods as required by the local electrical code in your area.
- If a dimmer control switch is used with this fixture, obtain professional advice to determine the correct type and electrical rating required.


### PREPARATION

Before beginning assembly, installation or operation of product, make sure all parts are present. Compare parts with package contents list and diagram on previous page. If any part is missing or damaged, do not attempt to assemble, install or operate the product. Contact customer service for replacement parts.

Tools Required for Assembly (not included): Screwdriver, Phillips Screwdriver, Pliers, Electrical Tape, Wire Cutters, Safety Glasses, Ladder, Wire Stripper


## ASSEMBLY INSTRUCTIONS (continued)

7. Connect the ground wires (bare copper or green) from your fixture to the ground wire (bare copper or green) or ground screw in the electrical box. Connect the black wire (or wire marked "SPT-1") from the fixture to the black wire in the electrical box and connect the white wire (or the wire with ribbed side) from the fixture to the white wire in the electrical box. Use supplied wire nuts (AA) for all wire connections.

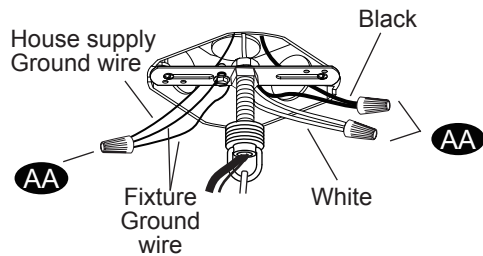


8. Once connections of wires are completed, carefully tuck wires and wire nuts (AA) into the electrical box making sure no bare wire (on the black and white) is visible at the wire nuts (AA).

9. Slide the canopy (DD) up the chain (EE) and over the upper connector. Slide the nut up the chain (EE) and thread onto the upper connector.

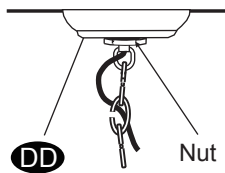

10. Attach the glass shade (E) to the fixture (A) using the thumb screws (II) (tighten with fingers only).

11. Install the specified bulb type and wattage (not included).

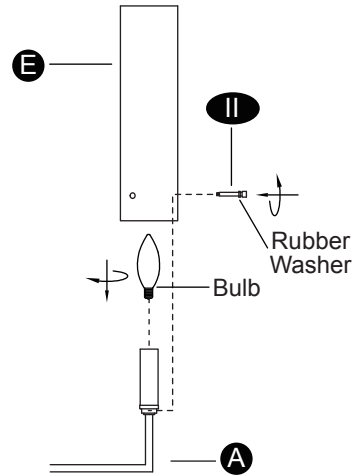

## CARE AND MAINTENANCE

- To clean, turn off and wipe with a damp, non-abrasive cloth.
- When cleaning, use only a soft brush or lint free cloth to avoid scratching the finish.
- Abrasive cleaning agents are not required and should be avoided to prevent damage to the finish.

## TROUBLESHOOTING

- 1) The light does not come on at all:
  - a) Make sure the wall switch and circuit breaker are on.
  - b) Make sure the wiring is correct.
- 2) Fuse blows or circuit trips when light is turned on.
  - a) Check for crossed wires, ensure wiring is correct.

If unable to fix any of the above issues, please consult a certified electrician.

**5-YEAR LIMITED WARRANTY:** If, during normal use, this **PATRIOT LIGHTING®** light fixture fails due to a defect in material and workmanship within five (5) years from the date of purchase, simply bring this light fixture with your original sales receipt back to your nearest **MENARDS®** retail store. At its discretion, **PATRIOT LIGHTING®** agrees to have the lighting fixture replaced with the same or similar **PATRIOT LIGHTING®** product free of charge, within the stated warranty period, when returned by the original purchaser with original sales receipt. This warranty: (1) excludes expendable parts including but not limited to light bulbs; (2) does not cover damage that has resulted from abuse or misuse; and (3) does not cover any losses, labor, injuries to persons/property or costs. This warranty does give you specific legal rights and you may have other rights, which vary from state to state.




### Questions, problems, missing parts?


Before returning to your retailer, call our customer service at 1-800-267-4427 Monday – Friday 8:00 a.m. – 5:00 p.m. EST

## ASSEMBLY INSTRUCTIONS


1. Spread the arms evenly. Secure the stem (FF) onto the screw stud. Tighten the bottom box (GG) with the finial (HH) against the stem (FF).
2. Screw the center rod (C&D) to the fixture (A). Tighten the loop (B) to the center rod (C).

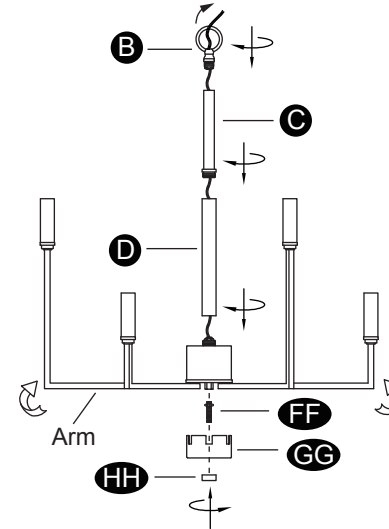


3. Determine the height that you would like to hang your fixture. Trim the cord and chain. Allow 10" of extra wiring for the electrical box connections.

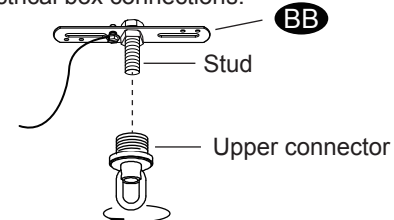

4. Loosen the upper connector from stud. Attach the mounting bracket (BB) to the electrical box using electrical box screws (CC). Attach the stud to the mounting bracket (BB) and adjust until it will clear the canopy (DD) when assembled (Place the canopy (DD) over the stud and tighten the upper connector onto the stud until snug. The upper connector should hold the canopy (DD) snug to the ceiling). Lock the stud in the correct position using the hex nut.

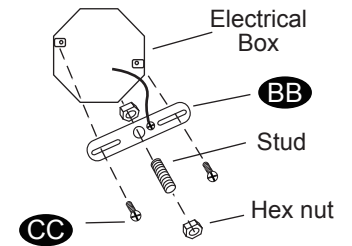

5. To attach chain loop to light fixture, use a screwdriver and wrench to open and close chain loop. Ensure to close the opening. Weave the power cord and ground wire through the links in the chain (EE).

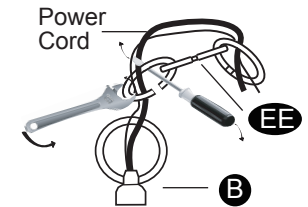

6. Loosen the nut on the upper connector and slide it down the chain (EE) towards the lower connector. Slide the canopy (DD) down the chain (EE) towards the lower connector. Feed the wire through nut, canopy (DD), the upper connector and onto the stud. Tighten the upper connector onto the stud. Spread the other end of the chain (EE) open and fasten to the upper connector. Ensure the opening is closed.

