

Sku Number: 351-8015

# **5 LIGHT CHANDELIER**


Model Number: H880




#### Questions, problems, missing parts?


Before returning to your retailer, call our customer service at 1-800-887-6326 Monday – Friday 9:00 a.m. – 5:00 p.m. CST

# PACKAGE CONTENTS

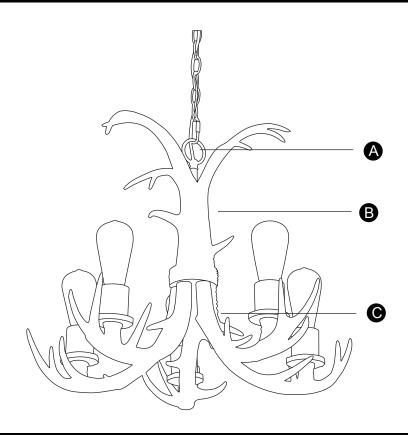

# HARDWARE CONTENTS Note: Hardware not shown actual size.

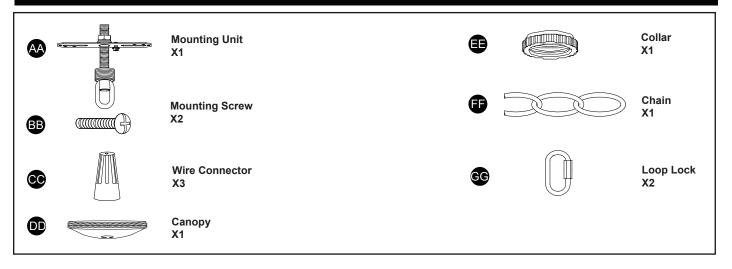

 

#### SAFETY INFORMATION

Please read and understand this entire manual before attempting to assemble, operate or install the product.

#### WARNING

- Turn off electricity at main fuse box (or circuit breaker box) before beginning installation by removing fuse (or switching off circuit breaker).
- Be careful not to damage or cut the wire insulation (covering) during fixture installation. Do not permit wires to contact any surface having a sharp edge. To do so may damage or cut the wire insulation, which could cause serious injury or death from electric shock.

#### CAUTION

- All electrical connections must be in agreement with local codes, ordinances or the national electric code (NEC). Contact your municipal building department to learn about your local codes, permits and/or inspections.
- Risk of fire most dwellings built before 1985 have supply wire rated for 140°F/60°C. Consult a qualified electrician before installation.
- Do not connect this fixture to an electrical system that does not provide a means for equipment grounding. Never use a fixture in a two-wire system that is not grounded. If you are not sure your lighting system has a grounding means, do not attempt to install this fixture. Contact a qualified, licensed electrician for information with regards to proper grounding methods as required by the local electrical code in your area.

### **PREPARATION**

Before beginning assembly, installation or operation of product, make sure all parts are present. Compare parts with package contents list and diagram on previous page. If any part is missing or damaged, do not attempt to assemble, install or operate the product.

Tools Required for Assembly (not included): Screwdriver, Phillips Screwdriver, Pliers, Electrical Tape, Wire Cutters, Safety Glasses, Ladder, Wire Stripper.

### ASSEMBLY INSTRUCTIONS


Turn off the power at fuse or circuit box.


1. Attach the mounting unit(AA) to outlet box with mounting screws(BB).

Note: The depth of threaded pipe on the mounting unit may need to be adjusted to properly fit the canopy.

2. Screw the threaded pipe into the coupling of the main fixture (C), and then secure it with a hex nut. Slide down the upper fixture(B) through the threaded pipe, and secure them with the loop (A).


Attach the candle tubes onto the sockets

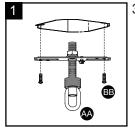

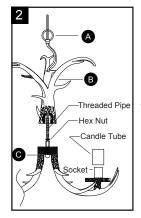


- 3. Weave the fixture wires and fixture grounding wire through the chain(FF), collar(EE) and the canopy(DD).
  - Connect the chain(FF) to the loop(A) and the top loop on the mounting unit(AA) using the two loop locks(GG).
  - Thread the fixture wires and fixture arounding wire through the center of the mounting unit(AA).
- 4. Connect the smooth wire to the black wire (power), the ribbed wire to the white wire (neutral) with the wire connectors (CC) provided. Connect the copper wire on the light fixture to the mounting unit(AA) by securing it with the preinstalled grounding screw, and then connect

it to the house grounding wire with the wire connector (CC). Tuck all the wires into outlet box.

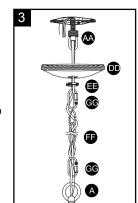


## ASSEMBLY INSTRUCTIONS (continued)


 Attach the canopy(DD) to the mounting unit(AA), and then secure it by tightening the collar(EE).

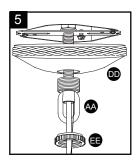

- 6. Install 5 x 60W max medium base vintage bulbs (included)
- Turn on the power at fuse or circuit box.

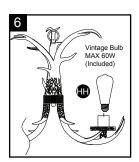

The following parts are available for re-order if damaged or missing. Call us toll-free at 1-800-887-6326

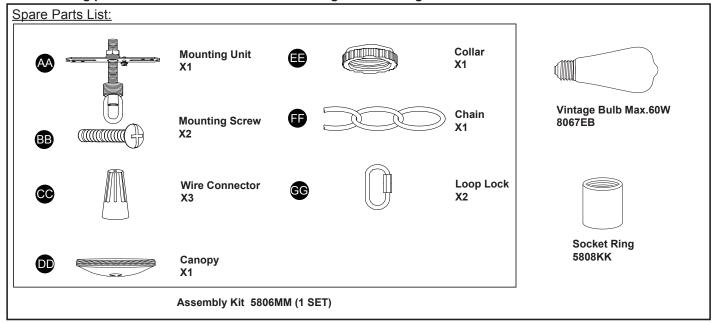

## **CARE AND MAINTENANCE**

• To clean, turn off and wipe with a damp, non-abrasive cloth.

### **TROUBLESHOOTING**

- 1) The light does not come on at all:
  - a) Make sure the wall switch and circuit breaker are on.
  - b) Make sure the wiring is correct.
- 2) Fuse blows or circuit trips when light is turned on.
  - a) Check for crossed wires, ensure wiring is correct.

If unable to fix any of the above issues, please consult a certified electrician.

**FIVE-YEAR LIMITED WARRANTY:** If, during normal use, this PATRIOT LIGHTING® lighting fixture breaks or fails due to a defect in material workmanship within five (5) years from the date of original purchase, simply bring this lighting fixture with the original sales receipt back to your nearest MENARDS® retail store. At its discretion, PATRIOT LIGHTING® agrees to have the product or any defective part(s) repaired or replaced with the same or similar PATRIOT LIGHTING® product or part free of charge, within the stated warranty period, when returned by the original purchaser with original sales receipt. This warranty; (1) excludes expendable parts including but not limited to light bulbs; (2) does not cover damage that has resulted from abuse or misuse; and (3) does not cover any losses, labor, injuries to persons/property or costs. This warranty does give you specific legal rights and you may have other rights, which vary from state to state.



#### Questions, problems, missing parts?

Before returning to your retailer, call our customer service at 1-800-887-6326 Monday – Friday 9:00 a.m. – 5:00 p.m. CST